TVman Auto Guide

Figure 1: Product Description

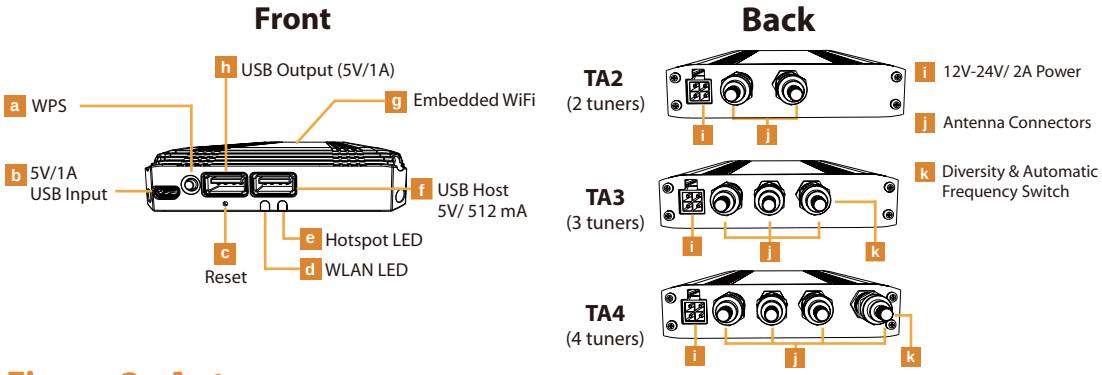

Figure 2 : Antenna

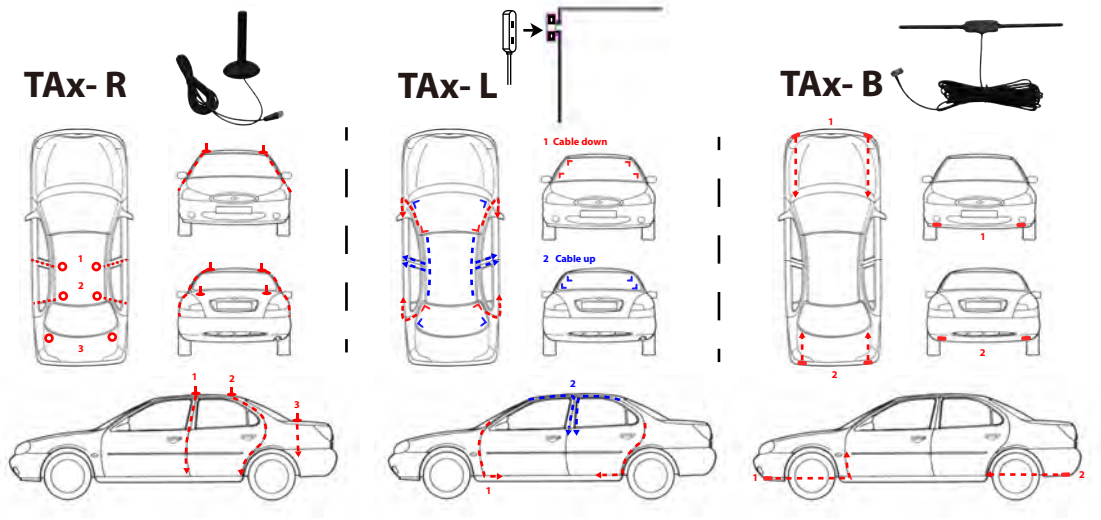

Figure 3 : TV and Multimedia Access Point

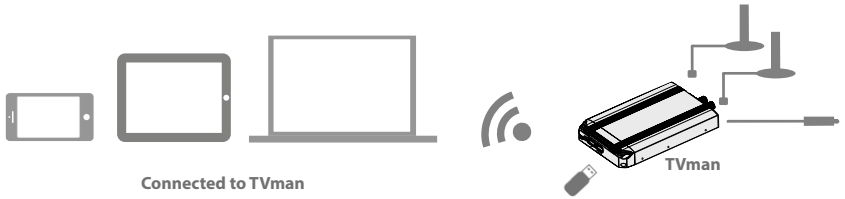

Application

Download

Figure 4 : Application

Smartphone | Tablet | Apple ios | Android | PC / Mac

English

I. Installation

Freeview, DVB-T

1. To watch TV: Install « TVman DVB » application from AppStore, GooglePlay or from our website for Window PC and MAC (Fig. 4)
2. To Play Multimedia from USB Disk: Install any players compatible with Samba server (check our web site for references).
3. Plug the power supply cable from TVman i to your cigar lighter (trunk or dashboard).
4. Hide TVman Auto below the passenger seat, on the trunk spare wheel compartment…
5. Install the antenna (refer to II) and screw to TVman j
6. Supply your GPS and charge your phone, tablet from the two USB outputs f h
7. Stream wirelessly your Movies, cartoons, music from your USB Disk f to 8 smart devices (format the disk in NTFS).

II. Antenna Installation (Refer to Fig. 2) *

1. **TAx-R (Roof Rod antenna)**: Place the antenna as described on Fig 2 TAx-R option 1, 2 or 3. Avoid metallic objects around antennas. Hide the cables on the door rubbers down to the floor, bellow carpets and connect to TVman below the passenger seat.

2. **TAx-L (Window Linear antenna)**: Choose where to hide the cables: up in the roof or down to the carpet: Fig 2 TAx-L option 1 or 2
   - **Option 1**: Cables (down) can follow the windscreen and be hidden in the door rubbers down to the floor, bellow carpets and be connected to TVman below the passenger seat. The L antenna should be placed on the Left side and R antenna on the Right side.
   - **Option 2**: Cables (up) can be hidden in the roof isolation and down beside the plastic decoration and connect to TVman below the seat. The L antenna should be placed on the right side and R antenna on the left (Antenna upside down).

   Stick Two antennas on the top (preferred) corners of your front windscreen (preferred) then others to the back windscreen (one for TA3 and two for TA4). For better reception, avoid placing the antenna over the window UV filtering film. Clean your window, remove the sticker no.1, stick the antenna then remove the sticker no.2. Remove the sticker from the cable connector, place its contacts to match with the antenna contacts and stick over as described in the fig 2. Align the cable with the antenna. *

3. **TAx-B (Bumper antenna)**: Stick Two antennas on the front bumper (preferred) then others to the back bumper by avoiding the Metallic License plate: Fig 2 TAx-B option 1 and 2 . Attach the cables below the car using the Nylon Cable Tie (Avoid moving and hot area). Check the car architecture to find pass-through from outside to inside and screw the antenna to TVman below the passenger seat.

Warning: Use only TVman Auto antenna (5V amplification) to not damage your product.

III. How to use TVman Auto?

1. Start your car (or ACC position) and wait for the blue LED to be solid to connect your smart devices to TVman WiFi (TVmanxxx).
2. Watch TV: Open "TVman DVB" application, scan the TV frequencies (first time only) and select a TV channel.
3. Play Multimedia: Open your "multimedia application", scan the network to find TVman "Samba" and play your USB disk files *
4. While traveling between two TV networks a new frequency scan could be required. Scan manually on TA2 or turn on the "automatic scan" of TA3 and TA4. When driving in the same TV frequency network, turn off the "Automatic scan" for a better reception.
5. To use TVman Auto at home and connect to your Wireless network please refer to our full user manual. *

IV. Hardware Description

- a WPS: easy pairing with router at home
- b USB power input for home
- c Reset to factory settings (long press)
- d WLAN LED (Home wireless network)
- e Hotspot LED (Access point)
- f 5V/512mA USB Host to record and share files from USB disk (NTFS) or charge phone
- g Embedded WiFi (IEEE 802.11)
- h 5V/1A USB power output for GPS, phone and tablet charging. Available only if TVman is supplied with 12V - 24V DC
- i Input voltage from cigar lighter or car electrical system (12V - 24V/ 2A)
- j Antenna connectors with 5 V DC for TV signal amplification
- k The tuner support diversity and automatic frequency switch

LED	STATUS	FUNCTION
e Hotspot	Fixed Blue	TVman available for the connection
	Blinking Blue	TVman is busy
d WLAN	Fixed Orange	TVman available for the connection
	Blinking Orange	TVman is busy
Blue and orange both blinkng		FW upgrading in progress
Blue and orange blinkng alternately		The device is booting up

CAUTION: Your TVman product has been designed and manufactured with materials and components of high quality that can be recycled and reused. This symbol means that electrical and electronic equipment, when end-of-life, should be disposed of separately from household waste. Please report this to your local collection point or recycling center. This will help to preserve the environment.

* Visit our web site for Full user manual, installation guide, support document, video..

français

I. Installation

TNT, DVB-T

1. Regardez la TNT: Installer l'application «TVman DVB» sur l'AppStore, GooglePlay ou notre site Web pour Windows PC et MAC (Fig 4).
2. Visualisez vos multimédias du disque USB: Installez une application compatibles avec le serveur Samba (Références sur notre site).
3. Branchez le câble d'alimentation du TVman i à votre allume-cigare (coffre ou tableau de bord).
4. Placez le TVman Auto dessous le siège du passager, dans le coffre, compartiment de la roue de secours ...
5. Installez l'antenne (voir II) et vissez la au TVman Auto j
6. Alimentez votre GPS ou rechargez votre téléphone, tablette aux sorties USB f h
7. Diffusez vos films, dessins animés, musiques de votre disque USB f vers huit appareils intelligents (formater le disque en NTFS).

II. Installation des antennes (voir la figure 2). *

1. **TAx-R (antenne Tige de toit)**: Placez les antennes (voir Fig 2 TAx-R option 1, 2 or 3). Évitez les objets métalliques autour des antennes. Cachez les câbles dans les caoutchoucs des portes vers le sol, sous les tapis et connectez les au TVman sous le siège du passager.

2. **TAx-L (antenne linéaire fenêtre)**: Choisissez où cacher les câbles: dans le faux plafond ou sous les tapis: Fig 2 TAx-L option 1 or 2
   - **Option 1**: Les Câbles (vers le bas) peuvent suivre le pare-brise, être caché dans les caoutchoucs des portes, sous les tapis de sol afin de les connecter au TVman sous le siège du passager. L'antenne L doit être placé sur le côté gauche et R sur le côté droit.
   - **Option 2:** Les Câbles (vers le haut) peuvent être caché dans le faux plafond et descendre derrière la décoration plastique vers le sol afin de les connecter au TVman sous le siège du passager. L'antenne L doit être placé sur le côté droit et R sur le côté gauche (à l'envers).

   Collez Deux antennes de préférence dans les coins supérieurs du pare-brise avant puis les autres sur le pare-brise arrière. Pour une meilleure réception, évitez de placer l'antenne sur les filtres UV de vos fenêtres. Nettoyez votre fenêtre, enlever l'autocollant n°1, collez l'antenne puis retirer l'autocollant n°2. Retirez l'autocollant du connecteur au bout du câble, placez ses contacts en correspondance avec ceux de l'antenne et collez comme décrit dans la figure 2. Alignez le câble avec l'antenne.

3. **TAx-B (antenne pare-chocs)**: coller les deux antennes de préférence sur le pare-chocs avant puis les autres sur le pare-chocs arrière en évitant la Plaque d'immatriculation métallique: Fig 2 TAx-B option 1 and 2. Fixez les câbles en dessous de la voiture (Évitez les parties chaude ou en mouvement). Vérifiez l'architecture de la voiture pour trouver un passage de l'extérieur vers l'intérieur et vissez l'antenne au TVman dessous le siège du passager.

Attention: Utilisez uniquement l'antenne TVman Auto (5V amplification) pour ne pas endommager le produit.

III. Comment utiliser votre TVman Auto?

1. Démarrez votre voiture et attendre que le voyant bleu soit fixe pour connecter vos appareils intelligents au WiFi du TVman (TVmanxxx).
2. Regardez la télévision: Ouvrez l'application "TVman DVB", Lancez une recherche des fréquences TNT et sélectionnez une chaîne.
3. Visualisez vos Multimédias: Ouvrez l'application Samba, balayez le réseau pour trouver le serveur "Samba" et lisez le fichier du disque USB
4. Si vous voyagez entre deux réseaux TNT, un nouveau balayage des fréquences sera nécessaire. Scannez manuellement avec le modèle TA2 ou autorisez la fonction «automatique scan » sur le TA3 et TA4. Si vous voyagez dans le même réseau TNT, éteignez le "scan automatique" pour une meilleure réception.
5. Pour utiliser le TVman Auto à la maison et le connecter à votre réseau sans fil, référez-vous à notre manuel d'utilisation complet. *

IV. description du matériel

- a WPS: appairage facile avec le routeur à la maison
- b Entrée d'alimentation USB pour la maison
- c Rétablir les réglages d'usine (appui long)
- d LED WLAN (réseau domestique sans fil)
- e Hotspot LED (point d'accés)
- f 5V/512mA USB Host pour enregistrer la TNT, partager les fichiers du disque USB (NTFS) ou charger votre téléphone
- g WiFi intégré (IEEE 802.11)
- h 5V /1A ortie USB pour alimenter le GPS ou charger votre téléphone, tablette... Disponible uniquement sous-alimentation 12V-24V DC
- i Alimentation 12V-24V de l'allume-cigare ou du système électrique de la voiture
- j Connecteurs d'antenne avec alimentation 5V DC pour l'amplification
- k Le tuner support la diversity et la recherche automatique des fréquences TV

LED	Statut	Fonction
e Hotspot	Bleu fixe	Le TVman est disponible
	Bleu clignotent	Le TVman est occupé
d WLAN	Orange fixe	Le TVman est disponible
	Orange clignotent	Le TVman est occupé
Bleu et Orange clignotent ensemble		Mise à jour en cours
Bleu et Orange clignotent en alternance		initialisation

Avertissement : Votre produit TVMan a été conçu et fabriqué avec des matériaux et composants de haute qualité, susceptibles d'être recyclés et réutilisés. Ce symbole signifie que les appareils électriques et électroniques, lorsqu'ils sont arrivés en fin de vie, doivent êtreéliminés séparément des ordures ménagères. Veuillez rapporter ce produit à la déchetterie communale ou à un centre de recyclage. Vous contribuez ainsi à la préservation de l'environnement

* Visitez notre site web pour le mode d'emploi complet, le guide d'installation, documents de support, vidéo ..